

SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

VQ2XLB/HV RB/FDRB

Series
Addition

High Quality Machining of Components for Difficult-to-Cut Materials




SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

Duplex Radius End Mills **VQFDRB**

VQFDRB provides amazingly long tool life when machining Cobalt Chrome Alloy.

- Improved notch wear due to the reduced side contact of the duplex geometry.
- Reduced flank wear through the use of SMART MIRACLE coating and an ultra micro-grain cemented carbide.
- Provides stable machining with a low radial cutting force.

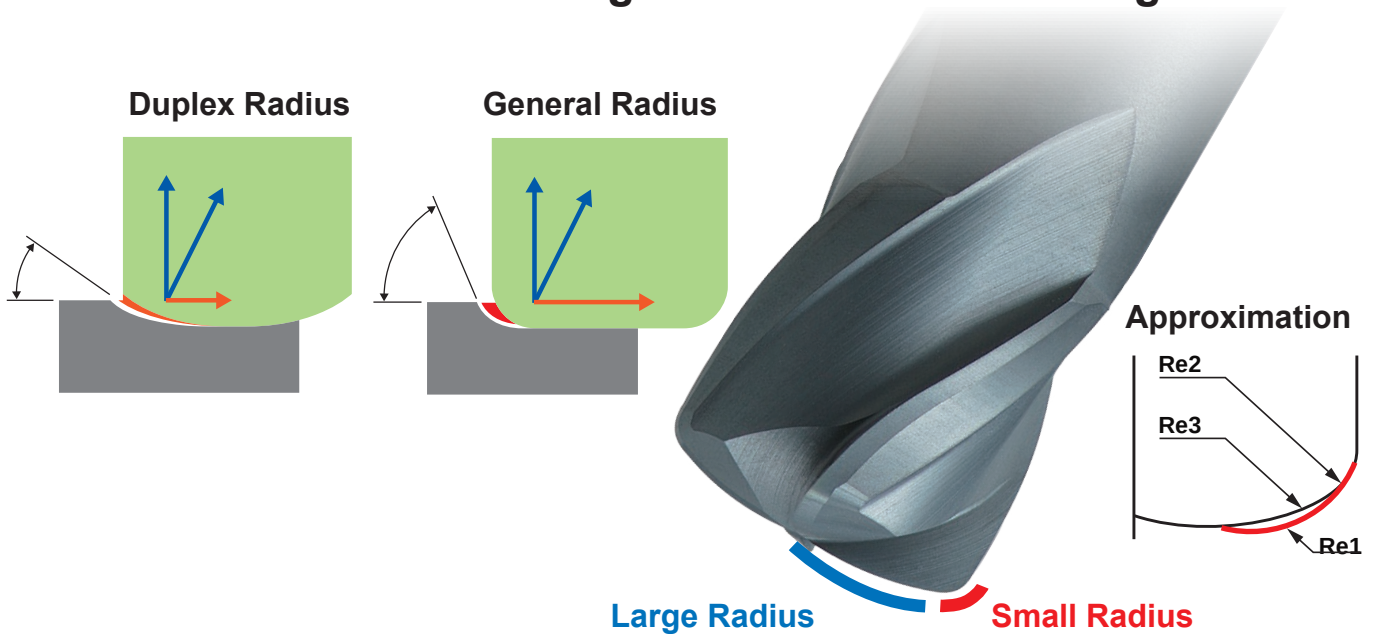


Cutting Performance

VQFDRB gave 5 times longer tool life than a conventional duplex radius end mill when machining cobalt chrome alloy.

<Cutting Conditions>

Workpiece Material : Co-Cr-Mo Alloy (ASTM F1537)
Tool : VQFDRBD0300N080 (DC=ø3mm)
Revolution : $n=8600 \text{ min}^{-1}$ ($v_c=80 \text{ m/min}$)
Feed Rate : $v_f=1300 \text{ mm/min}$ (0.038 mm/t.)
Depth of Cut : $a_p=0.2 \text{ mm}$ $a_e=1.3 \text{ mm}$
Cutting Mode : External Coolant (Emulsion)



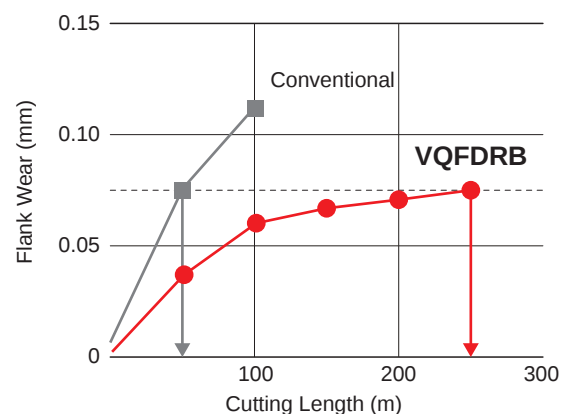


VQFDRB

Duplex corner radius end mill for high speed cutting



Carbon Steel, Alloy Steel, Cast Iron (≤30HRC)	Tool Steel, Pre-hardened Steel, Hardened Steel (≤45HRC)	Hardened Steel (≤55HRC)	Precipitation Hardening Stainless Steel	Austenitic Stainless Steel	Cobalt Chrome Alloy, Heat Resistant Alloy	Titanium Alloy	Aluminium Alloy
					◎	○	

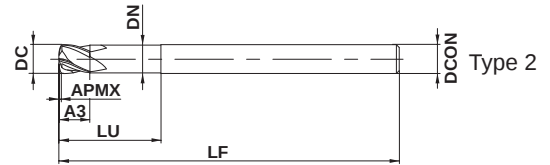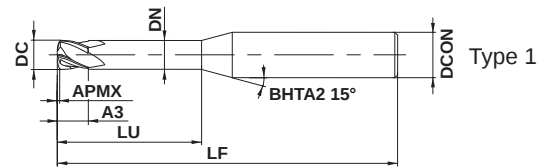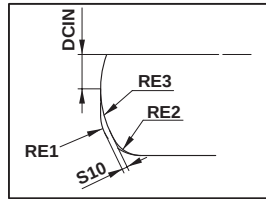

1 ≤ DC ≤ 4				
0 - 0.020				
DCON = 6				
0 - 0.005				

- Duplex corner radius type allows a more efficient higher feed.
- High feed cutting realized through the use of multiple cuts.

(mm)

Order Number	DC	RE1 ^{*1}	APMX	A3 ^{*3}	LU	DN	LF	DCON	No. F ^{*4}	Multi-task radius part				RMPX ^{*2}	Stock	Type
										S10	DCIN	RE2	RE3			
VQFDRBD0300N080	3	0.64	0.18	3	8	2.8	50	6	4	0.08	0.75	0.5	2	2.1°	●	1
VQFDRBD0300N120	3	0.64	0.18	3	12	2.8	55	6	4	0.08	0.75	0.5	2	2.1°	●	1
VQFDRBD0400N120	4	0.71	0.25	4	12	3.8	55	6	4	0.13	1.0	0.5	3	1.9°	●	1
VQFDRBD0400N160	4	0.71	0.25	4	16	3.8	60	6	4	0.13	1.0	0.5	3	1.9°	●	1
VQFDRBD0600N180	6	0.92	0.36	6	18	5.6	60	6	4	0.21	1.5	0.6	5	1.7°	●	2

*1 RE1 : Approx. R

*2 RMPX : Max. Ramping Angle

*3 A3 : Cutting Edge Effective Length

*4 Number of Flutes

DC = Dia.

APMX = Length of Cut

LU = Neck Length

DN = Neck Dia.

LF = Overall Length

DCON = Shank Dia.

● : Inventory maintained in Japan.

SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

VQFDRB


Duplex corner radius end mill for high speed cutting

Recommended Cutting Conditions

(mm)


Workpiece Material	Titanium Alloys					Cobalt Chromium Alloys Precipitation Hardening Stainless Steels				
	Ti-6Al-4V ELI etc.					Co-Cr-Mo, SUS630, SUS631, 15-5PH, 17-4PH etc.				
DC	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae
3	8500	80	2100	0.2	1.3	6400	60	3000	0.2	1.3
4	6400	80	2200	0.2	1.7	4800	60	2700	0.2	1.7
6	4200	80	1400	0.3	2.0	3200	60	2100	0.3	2.6

Depth of Cut



Workpiece Material	Heat Resistant Alloys				
	Inconel 718 etc.				
DC	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae
3	3200	30	770	0.2	0.6
4	2400	30	770	0.2	0.8
6	1600	30	520	0.3	1.3

Depth of Cut



Note 1) SMART MIRACLE coating has very low electrical conductivity; therefore, an external contact type of tool setter (electrically transmitted) may not work.

When measuring the tool length, please use an internal contact type (non-electrical type) or a laser tool setter.

Note 2) When cutting titanium alloys, the use of water-soluble cutting fluid is effective.

Note 3) If the depth of cut is smaller, the revolution and the feed rate can be increased.

SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

Vibration Control Corner Radius End Mills

VQHVRB

Increased feed rates and large depths of cut are achievable with VQHVRB, resulting in highly efficient machining.

Variable Helix


Vibration control geometry for smooth, stable cutting.

Special Gash

Good chip disposal enables both increased feed rates and large depths of cut.

Smart Miracle Coating

Reduced flank wear through the use of SMART MIRACLE coating and an ultra micro-grain cemented carbide substrate.

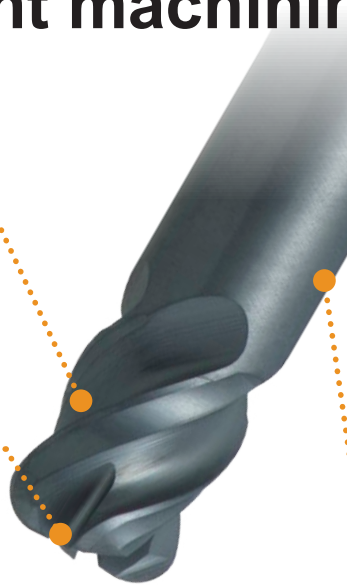

Cutting Performance

VQHRB wears less than the conventional end mill and provides a stable cutting action.


<Cutting Conditions>

Workpiece Material : Titanium Alloy
Tool : VQHVBD0300R05N180 (DC=ø3mm)
Revolution : $n=8600 \text{ min}^{-1}$ ($v_c=80 \text{ m/min}$)
Feed Rate : $v_f=1300 \text{ mm/min}$ (0.05 mm/t.)
Depth of Cut : $a_p=0.2 \text{ mm}$ $a_e=1.3 \text{ mm}$
Cutting Mode : External Coolant (Emulsion)
Cutting Length : 50m
Machine : Vertical MC (BT30)

VQHVRB



Conventional

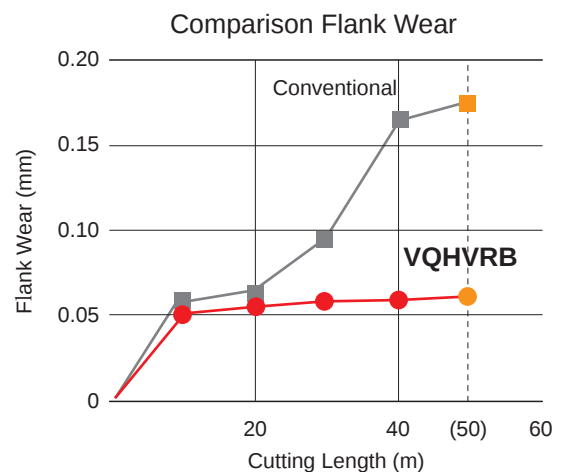


SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

VQHVRB


Corner radius, Short cut length, 4 flute, Irregular helix flutes



Carbon Steel, Alloy Steel, Cast Iron (≤30HRC)	Tool Steel, Pre-hardened Steel, Hardened Steel (≤45HRC)	Hardened Steel (≤55HRC)	Precipitation Hardening Stainless Steel	Austenitic Stainless Steel	Cobalt Chrome Alloy, Heat Resistant Alloy	Titanium Alloy	Aluminium Alloy
					○	○	



Effective length
for inclined angle

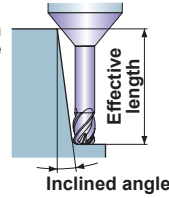

0.1 ≤ RE ≤ 1			
±0.01			
1 ≤ DC ≤ 4			
0 - 0.02			
DCON=6			
0 - 0.005			

● SMART MIRACLE corner radius end mill for high feed rates and efficient machining.

(mm)											
Order Number	DC	RE	APMX	LU	DN	B2	LF	DCON	*1 No.F	Stock	Type
VQHVRBD0100R01N080	1	0.1	1	8	0.94	8.2°	50	6	4	●	1
VQHVRBD0100R01N120	1	0.1	1	12	0.94	6.7°	55	6	4	●	1
VQHVRBD0200R02N120	2	0.2	2	12	1.9	5.9°	55	6	4	●	1
VQHVRBD0200R02N160	2	0.2	2	16	1.9	4.9°	60	6	4	●	1
VQHVRBD0300R05N100	3	0.5	3	10	2.9	5.6°	55	6	4	●	1
VQHVRBD0300R05N180	3	0.5	3	18	2.9	3.7°	60	6	4	●	1
VQHVRBD0400R10N120	4	1.0	4	12	3.9	3.9°	55	6	4	●	1
VQHVRBD0400R10N200	4	1.0	4	20	3.9	2.5°	60	6	4	●	1

*1 Number of Flutes


DC = Dia.
RE = Radius
APMX = Length of Cut
LU = Neck Length

DN = Neck Dia.
LF = Overall Length
DCON = Shank Dia.

● : Inventory maintained in Japan.

Recommended Cutting Conditions

(mm)

Workpiece Material		Titanium Alloys					Cobalt Chromium Alloys Precipitation Hardening Stainless Steels				
		Ti-6Al-4V ELI etc.					Co-Cr-Mo, SUS630, SUS631, 15-5PH, 17-4PH etc.				
DC	LU	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae
1	8	2500	8	500	0.030	0.1	2500	8	500	0.030	0.1
1	12	2500	8	350	0.030	0.1	2500	8	350	0.030	0.1
2	12	4800	30	600	0.075	0.3	4800	30	600	0.075	0.3
2	16	4800	30	340	0.075	0.3	4800	30	350	0.075	0.3
3	10	8500	80	2400	0.190	1.3	6400	60	2200	0.170	1.3
3	18	8500	80	2000	0.190	1.3	6400	60	1600	0.170	1.3
4	12	6400	80	2000	0.250	1.7	4800	60	1800	0.220	1.7
4	20	6400	80	2000	0.250	1.7	4800	60	1800	0.220	1.7
Depth of Cut											

Note 1) SMART MIRACLE coating has very low electrical conductivity; therefore, an external contact type of tool setter (electrically transmitted) may not work.

When measuring the tool length, please use an internal contact type (non-electrical type) or a laser tool setter.

Note 2) When cutting titanium alloys, the use of water-soluble cutting fluid is effective.

Note 3) If the depth of cut is smaller, the revolution and the feed rate can be increased.

Note 4) The irregular helix flute end mill has a larger effect on controlling vibration when compared to standard end mills. However, if the rigidity of the machine or the workpiece material installation is poor, vibration or abnormal sound can occur.

In this case, please reduce the revolution and the feed rate proportionately, or set a lower depth of cut.


SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

Long Neck Ball Nose End Mills **VQ2XLB**

VQ2XLB provides long tool life and stable cutting when machining cobalt chrome and titanium alloy.


- A new cutting edge geometry provides improved resistance to chipping.
- SMART MIRACLE coating providing better wear resistance when machining difficult-to-cut materials.

VQ2XLB

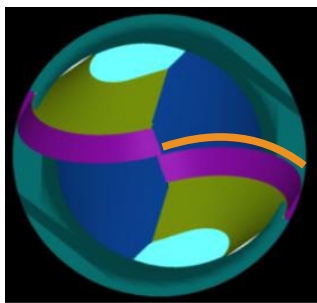

Strong S

General (For Moulds)

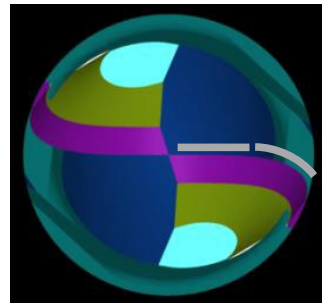

Normal Curve

Tooling Example

Workpiece Material : Co-Cr-Mo Alloys

● Customer Comment

“Machined surface roughness is better than conventional tools under normal conditions”

Process		Rough 1	Rough 2	Finish 1	Finish 2
Tool		VQ2XLBR0150N140 Ø3 (RE1.5)	VQ2XLBR0150N140 Ø3 (RE1.5)	VQ2XLBR0100N100S06 Ø2 (RE1.0)	VQ2XLBR0050N080N06 Ø1 (RE0.5)
Cutting Speed vc (m/min)		80	79.8	75.4	62.8
Revolution n (min ⁻¹)		6400	8500	12000	20000
Feed Rate vf (mm/min)		800	960	800	660
fz (mm/t.)		0.063	0.057	0.033	0.017
Depth of Cut	ap (mm)	0.15	0.12	0.1	0.05
	ae (mm)	1.0	0.3	0.2	0.08
Cutting Time (min)		400	60	90	150
Wear Condition		Good	Good	Good	Good

VQ2XLB



Ball nose, Short cut length, 2 flute, Long neck



Carbon Steel, Alloy Steel, Cast Iron (≤30HRC)	Tool Steel, Pre-hardened Steel, Hardened Steel (≤45HRC)	Hardened Steel (≤55HRC)	Precipitation Hardening Stainless Steel	Austenitic Stainless Steel	Cobalt Chrome Alloy, Heat Resistant Alloy	Titanium Alloy	Aluminium Alloy
					○	○	



Effective Length
for Inclined Angle

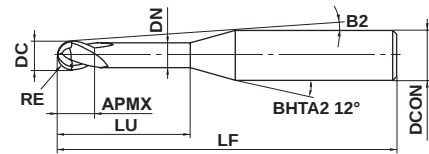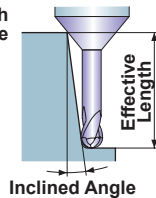

Type1



$0.05 \leq RE \leq 1.5$			
± 0.005			
$4 \leq DCON \leq 6$			
0 $- 0.005$			

- SMART MIRACLE coating providing better wear resistance when machining difficult-to-cut materials.

(mm)

Order Number	RE	DC	APMX	LU	DN	B2	LF	DCON	*1 No.F	Stock	Type
VQ2XLBR0050N080	0.5	1	0.75	8	0.94	6.4°	50	4	2	●	1
VQ2XLBR0050N100	0.5	1	0.75	10	0.94	5.6°	50	4	2	●	1
VQ2XLBR0050N080S06	0.5	1	0.75	8	0.94	8.3°	50	6	2	●	1
VQ2XLBR0050N100S06	0.5	1	0.75	10	0.94	7.5°	55	6	2	●	1
VQ2XLBR0050N120S06	0.5	1	0.75	12	0.94	6.8°	55	6	2	●	1
VQ2XLBR0075N100S06	0.75	1.5	1.1	10	1.44	7.2°	55	6	2	●	1
VQ2XLBR0075N120S06	0.75	1.5	1.1	12	1.44	6.5°	55	6	2	●	1
VQ2XLBR0100N100	1.0	2	1.5	10	1.9	4.5°	50	4	2	●	1
VQ2XLBR0100N100S06	1.0	2	1.5	10	1.9	6.9°	55	6	2	●	1
VQ2XLBR0100N120	1.0	2	1.5	12	1.9	3.9°	50	4	2	●	1
VQ2XLBR0100N120S06	1.0	2	1.5	12	1.9	6.1°	55	6	2	●	1
VQ2XLBR0150N120	1.5	3	2.3	12	2.9	5.3°	55	6	2	●	1
VQ2XLBR0150N140	1.5	3	2.3	14	2.9	4.7°	60	6	2	●	1
VQ2XLBR0150N160	1.5	3	2.3	16	2.9	4.3°	60	6	2	●	1

*1 Number of Flutes

DC = Dia.
RE = Radius
APMX = Length of Cut
LU = Neck Length

DN = Neck Dia.
LF = Overall Length
DCON = Shank Dia.

● : Inventory maintained in Japan.


SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

VQ2XLB


Ball nose, Short cut length, 2 flute, Long neck

Recommended Cutting Conditions

(mm)

Workpiece Material		Titanium Alloys					Cobalt Chromium Alloys				
		Ti-6Al-4V ELI, ASTM F136, etc.					ASTM F75: Casting, F1537: Wrought Bar, F799: Forgings, etc.				
RE	LU	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae
0.5	8	32000	100	2500	0.05	0.1	25000	80	2000	0.05	0.1
0.5	10	24000	75	1500	0.05	0.1	19000	60	1500	0.05	0.1
0.5	12	24000	75	1500	0.03	0.1	19000	60	1500	0.03	0.1
0.75	10	21000	100	2100	0.13	0.3	17000	80	1700	0.08	0.1
0.75	12	16000	75	1500	0.13	0.3	13000	60	1200	0.08	0.1
1	10	16000	100	1800	0.20	0.5	13000	80	1500	0.2	0.5
1	12	16000	100	1800	0.20	0.5	13000	80	1500	0.2	0.5
1.5	12	10000	100	1600	0.30	0.8	8500	80	1300	0.3	0.8
1.5	14	10000	100	1600	0.30	0.8	8500	80	1300	0.3	0.8
1.5	16	10000	100	1600	0.30	0.8	8500	80	1300	0.3	0.8
Depth of Cut		$\leq 0.10RE$ ($RE \leq 1$) $\leq 0.20RE$ ($RE > 1$) 									

RE : Radius

Workpiece Material		Pure Titanium				
		Ti etc.				
RE	LU	Revolution n (min ⁻¹)	Cutting Speed vc (SFM)	Feed Rate vf (IPM)	Depth of cut ap	Width of cut ae
0.5	8	27000	80	1600	0.08	0.1
0.5	10	19000	60	1200	0.08	0.1
0.5	12	19000	60	1200	0.04	0.1
0.75	10	25000	120	2000	0.13	0.2
0.75	12	21000	100	1600	0.13	0.2
1	10	32000	200	2500	0.32	0.8
1	12	29000	180	1700	0.32	0.8
1.5	12	21000	200	1600	0.48	1.2
1.5	14	21000	200	1600	0.48	1.2
1.5	16	21000	200	1600	0.48	1.2
Depth of Cut		$\leq 0.10RE$ ($RE \leq 1$) $\leq 0.20RE$ ($RE > 1$) 				

RE : Radius

Note 1) SMART MIRACLE coating has very low electrical conductivity; therefore, an external contact type of tool setter (electrically transmitted) may not work.

When measuring the tool length, please use an internal contact type (non electrical type) or a laser tool setter.

Note 2) When cutting titanium alloys, the use of water-soluble cutting fluid is effective.

Note 3) If the depth of cut is smaller, the revolution and the feed rate can be increased.



SMART MIRACLE End Mill Series for Difficult-to-Cut Materials

VQ2XLB/HVVRB/FDRB

For Your Safety

●Don't handle inserts and chips without gloves. ●Please machine within the recommended application range and exchange expired tools with new ones in advance of breakage. ●Please use safety covers and wear safety glasses. ●When using compounded cutting oils, please take fire precautions. ●When attaching inserts or spare parts, please use only the correct wrench or driver. ●When using rotating tools, please make a trial run to check run-out, vibration and abnormal sounds etc.

MITSUBISHI MATERIALS CORPORATION

MMC Hardmetal (Thailand) Co., Ltd.

622 Emporium Tower, Floor 22/1-4, Sukhumvit Road, Klongton, Klongtoey, Bangkok 10110 Thailand Tel : +66-2661-8170 Fax : +66-2258-1790

Thailand Rayong Branch

24/1 Moo4 ESIE Plaza 1, 1st Flor., unit G6-B and G6-C, Tambon Pluak Daeng, Rayong 21140 Thailand Tel : +66-3895-5658 Fax : +66-3895-5659

Singapore Branch

33 Ubi Avenue3, #05-14 Vertex, Singapore 408868 Tel : +65-6634-8250 Fax : +65-6634-8257

Ho Chi Minh Representative Office

1205 12th Floor SROC, 2A-4A Ton Duc Thang, Ben Nghe, Dist. 1, Ho Chi Minh City, Vietnam Tel : +84-28-3829-7700 Fax : +84-28-3824-3344

Thailand Amata City Branch

Amata Nakorn Industrial Estate Phase 9 700/843 Moo 5, Tambon Nongkakha, Amphur Phanthong, Chonburi, 20160 Thailand Tel : +66-3821-0728 Fax : +66-3821-0732

Thailand Korat Branch

1444/2 Moo13, Tambon Choho, Amphur Muang Nakhon Ratchasima, Nakhon Ratchasima 30310 Thailand Tel : +66-6-1416-7246

Indonesia Representative Office

MM2100 Industrial Town Jl. Jawa Blok GG-6 No.2 Jatiwangi, Cikarang, Bekasi Indonesia 17520 Tel : +62-21-2214-3639 Fax : +62-21-2214-3745

Hanoi Representative Office

403A, 4th Fl. of The 6-Storey Block, Thang Long Ford Building, 105 Lang Ha St., Dong Da District, Hanoi, Vietnam Tel : +84-24-3772-8362 Fax : +84-24-3772-8299

<http://www.mitsubishicarbide.com/en/>
(Tools specifications subject to change without notice.)

EXP-20-E007
2020.9.(-)